

How to remove pump from pallet truck frame

- C** Remove Retaining Ring.
- B** Free Socket Screw in Spigot. Remove Axle.
- A** Remove cover and Retaining Ring on Axle. Remove wheel.

